 


**BSP-D8**

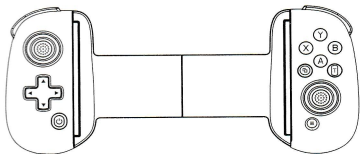

# **D8无线手柄**

D8 WIRELESS HANDLE

 
D 8ワイヤレスハンドル

产品说明书 / User Manual / 製品仕様書



# Wireless controller manual

## Schematic diagram of function buttons:

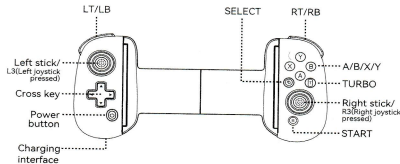

## Applicable instructions:

1. This product adopts ergonomic design and has a comfortable touch.
2. Equipped with stretching and shrinking function, it can stretch and store mobile phones with different lengths of 129-252mm.
3. Using Bluetooth 5.0 EDR/BLE connection, the handle is connected to various hosts such as mobile phones through Bluetooth.
4. Supports ShootingPlus V3 APP, which can be downloaded from various mobile application markets.
5. Supports Android and Harmony OS HID standard modes, and can play various game hall games that support HID standard modes.
6. Supports Android 6.0 or higher systems (i.e. ShootingPlus V3 Android mode).
7. Support multiple touch controls for iOS 10.1 to 13.3.1 systems (i.e. ShootingPlus V3 iOS mode); Supports single touch control for iOS 13.4 and above systems.
8. Supports MFI games for iOS 13.0 and above systems, and MFI games can be downloaded from the ShanWan MFI app.
9. Support PS3/PS4/SWITCH game console Bluetooth connection to play games, and have gyroscope function.
10. Supports Bluetooth connectivity for Windows 10 laptops and plays X-input games.
11. Supports USB cable and can play PC/PS3/SWITCH games.

- ★ Due to phone system issues, some phones may not support this device
- ★ Due to uncontrollable factors such as software upgrades or source code changes on the official game platform, some games cannot be connected and operated with this product. Our company is not responsible for any of the consequences. Our company reserves the final right of interpretation regarding this matter.

## Product characteristic parameters:

1. Working voltage: DC3.7V
2. Working current: approximately 10mA
3. Continuous use time: >20H
4. Sleep current: <5uA
5. Charging voltage/current: DC5V/500mA
6. Bluetooth transmission distance: <=8M
7. Battery capacity: 350mAh
8. Standby time: 60 days when fully charged




When using this product, please keep the device horizontally placed and ensure that the camera is on the left, and restore the game's key positions to their default settings.

## Product Instructions:


### Android ShootingPlus V3 mode (Harmony OS system and Android ShootingPlus V3 mode are the same):

Press "A+U" for 2 seconds to enter V3 Android mode, and the handle light will flash. When the Android phone searches for the device name "BSP-D8", select Connect. After successful connection, the indicator light on the handle will remain red. Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.

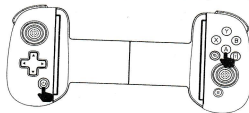

### iOS ShootingPlus V3 Mode:

Press "Y+U" for 2 seconds to enter V3 iOS mode, and the handle light will flash quickly. When the Apple phone searches for the device name "BSP-D8", select Connect. After successful connection, the handle indicator light remains on white. Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.

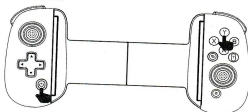

## Android/Harmony OS/iOS key mapping function:

Follow the official account "ShootingPlus" and check the default operating instructions in the official account. If you need to set the mapping keys, please download and install the "ShootingPlus V3" APP, map the keys and adjust the key positions in the APP.

ShootingPlus V3 App can be downloaded from the App Store for iOS systems, and from various mobile application markets for Android and Harmony systems.



 
ShootingPlus  
WeChat official account

### Android Standard Mode:

1. Press "X+U" for 2 seconds to enter the standard Android mode, and the handle light will flash quickly. When the Android/Hongmeng phone searches for the device name "BSP-D8", select Connect. After successful connection, the indicator light on the handle will stay on in orange.

Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.


2. In Android/Harmony OS standard mode, you can download various game halls and enter the platform to download the required games.



### iOS MFi Mode:

Press "B+U" for 2 seconds to enter iOS MFi mode, and the handle light will flash quickly. When the Apple phone searches for the device name "DUALSHOCK 4 Wireless Controller", select Connect. After successful connection, the indicator light on the handle will always be purple.

 Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back. MFi games can be downloaded from the ShanWan MFi app.



## PC X-input Bluetooth mode:

 
At the same time, press "RB+U" for 2 seconds to enter the computer Bluetooth mode. The handle indicator light flashes quickly, open the computer, find the Bluetooth device to add, click Search, and when the device name "Xbox Wireless Controller" is found, select Connect. After successful connection, the handle indicator light will remain on in cyan. Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.



### SWITCH mode:

On the SWITCH host, select Controller -> Change Grip/Order to enter the SWITCH host pairing mode interface. Press L+R on the controller. Simultaneously press [RT+U] for 2 seconds to enter the SWITCH mode for pairing, and the LED light will flash. If the pairing is successful, the handle indicator light will remain green.

Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.

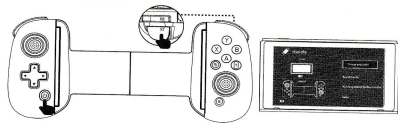


### PS3/PS4 mode:

Connect the handle directly to the PS3/PS4 host using a TYPE-C USB data cable, press U to pair, and after successful pairing, the handle indicator light will remain on in blue. Successfully connected, you can directly press U, the indicator light flashes slowly, and automatically connect back.

## PC 2.4G computer receiver mode:

 Simultaneously press "LB+⏏" for 2 seconds to enter computer mode. The handle indicator light flashes quickly, indicating PC connection mode. The computer receiver is plugged into the computer. After successful connection, the handle indicator light will remain on in cyan. Successfully connected, you can directly press ⏏, the indicator light flashes slowly, and automatically connect back.




Computer receiver  
[ Insert computer ]

## Wired mode:

 
1. Automatic recognition of various system platforms in wired mode, supported by Android, PC (D-input and X-input), PS3, and Switch.
2. On a PC, pressing the ⏏ key for 2 seconds can switch between PC/PS3 mode and XBOX360 mode.
3. On iOS 16.0 and above systems, it is supported to hold down the "⏏" button and insert a USB to connect to an iOS computer, iOS phone, or iOS tablet. In iOS wired mode.

## Motor vibration force adjustment:



Pressing and holding the TURBO-right joystick up and down can enhance and weaken the motor vibration force


## TURBO settings:

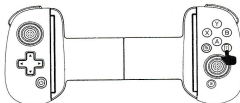

Press "A" and then "T" to activate Turbo burst. Press "A" for the second time and then "T", the "A" button will automatically send consecutive messages. Press "A" for the third time and then "T" to turn off the burst (restore to its original state).


When the "A" button is in AUTO mode, press and hold the "TURBO+left joystick up and down" button to set the speed of the automatic burst, which is 15 beats per second, 25 beats per second, and 8 beats per second, respectively. (Note: The setting method for other function keys is the same as above)

## Axis calibration function:

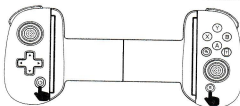


Place the handle flat on the desktop, press and hold the "≡+⏏" button, wait for the indicator light to remain on, and then release. After calibration is completed, the indicator light will turn off.

## Strong sense of body opening:

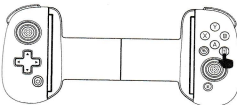

1. Press and hold the "T" button for eight seconds, and if the motor vibrates, switch to the simulated right joystick.
2. Press and hold the "T" button again for eight seconds, and if the motor vibrates, switch to the simulated left joystick.
3. Press and hold the "T" button again for eight seconds, and if the motor vibrates, it will be cancelled.

## Light adjustment function:

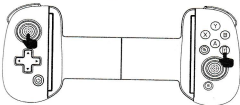

Simultaneously press and hold "T+L3 (left joystick pressed)" to switch the light effect. The order of switching light effects is:  
RGB light breathing  
» RGB light pause  
» Light off, three cycles.

## Handle charging/hibernation/wake-up function:

1. Handle charging function:
  - A. When the battery is low, the indicator light flashes quickly to prompt;
  - B. When charging, the indicator light flashes slowly to indicate;
  - C. When fully charged, the handle shuts down;
2. Handle sleep/wake up/shutdown function:
  - A. The handle automatically shuts down and sleeps when there are no button operations within 5 minutes;
  - B. When you need to use it again, you need to press the ⏏ key to wake up and reconnect;
  - C. In the power-on state, press and hold the ⏏ button for 8 seconds to shut down the product and turn off all LED indicators.

## Operation and usage mode:

### Bluetooth mode:

Applicable system	Android/Harmony OS		IOS system	
Working mode	ShootingPlus V3	Android Standard Mode	iOS MFI mode	ShootingPlus V3
Mode pairing (2 seconds long)	A+ 〇	X+ 〇	B+ 〇	Y+ 〇
pilot lamp	Red	Orange	Purple	White
notes	Play games downloaded from the Android Market	Play Android HID Game Hall	Play the MFI game ShanWan MFI App for download	Play App Store downloaded games iOS 13.4 or more with single touch

### Computer receiver and data cable mode:

 
Applicable system	Computer / PC	PC 2.4G	PS3 / PS4 / PS5	Switch
Mode pairing (2 seconds long)	RB+ 〇	LB+ 〇	Plug in USB data cable	RT+ 〇 or Plug in USB
pilot lamp	Cyan	Cyan	Blue	Green
notes	Play X-input games	Play X-input and D-input game	Play PS3/PS4 games	Playing Switch Games

\*Computers need an optional computer receiver

## Precautions:

1. Do not store the product in wet or hot places;
2. Do not hit, hit, bat, pierce or attempt to break down the product to avoid unnecessary damage to it;
3. The product has built-in batteries, do not throw them away with garbage;
4. Do not charge the handle near fire or other heat sources;
5. Non-professionals should not disassemble this product, otherwise it is not in the after-sale warranty service.

## Product List:



wireless handle \*1




instructions \*1



TYPE-C USB \*1

# ワイヤレスコントローラ説明書
 
## 機能ボタンの概略図:

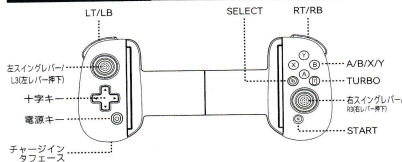

## 適用説明:

1. 本製品は人体工学設計を採用し、手触りが快適である。
2. 延伸収納機能があり、異なる長さ129 ~ 252 mmの携帯電話を延伸収納することができる。
3. Bluetooth 5.0 EDR/BLE接続を採用し、ハンドルはBluetoothを通じて携帯電話などの各ホストと接続する。
4. ShootingPlus V3 APPをサポートし、APPIは各携帯アプリ市場を通じてダウンロードすることができる。
5. アンドロイドと鸿蒙HID標準モードをサポートし、HID標準モードをサポートする各種ゲームセンターゲームをプレイすることができる。
6. Android 6.0以上のシステム（つまりShootingPlus V3 Androidモード）をサポートする。
7. iOS 10.1から13.3.1システム（つまりShootingPlus V3 iOSモード）の複数のタッチ制御をサポートする。
8. iOS 13.0以上のシステムMFIゲームをサポートし、MFIゲームはShanWan MFI appでダウンロードできる。
9. PS 3/PS 4/SWITCHゲーム本体のBluetooth接続ゲームをサポートし、ジャイロスコープ機能を有する。
10. Windows 10システムノートパソコンのBluetooth接続をサポートし、X-Inputゲームをプレイする。
11. USBケーブルに対応し、PC/PS 3/SWITCHのゲームをプレイすることができる。

★携帯電話システムの問題で、個別の携帯電話はこの機器に対応していない可能性があります。

★公式ゲームプラットフォームのソフトウェアアップグレードやソースコード変更などの不可抗力要因により、一部のゲームが本製品と接続操作できなくなり、当社はいかなる責任も負いません。これに対して当社は最終的な解释权を留保している。